



水擊式負離子產生器

HydroFlow Air System


使用說明書

使用前請詳閱本說明書並妥善保存

一、商品結構與配件


■ 正面

1. LED 觸控面板
2. 前蓋
3. 手提把
4. 負離子出口處
5. 水位透視窗

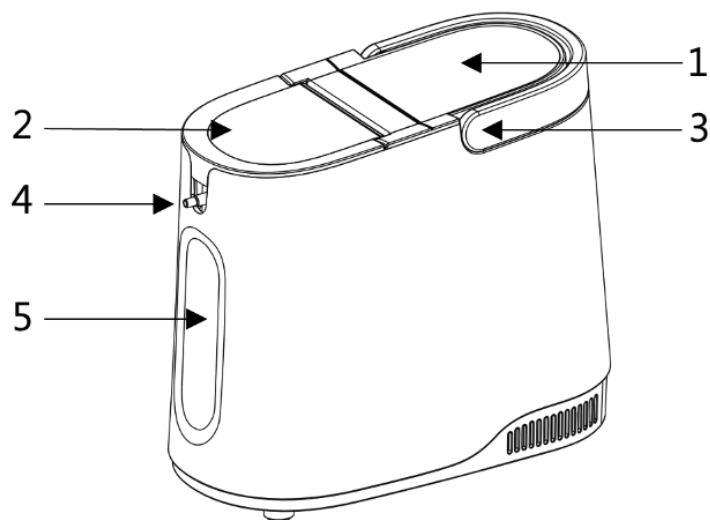


■ 背面

6. 過濾器蓋板
7. 電源接頭
8. 電源開關
9. 散熱孔

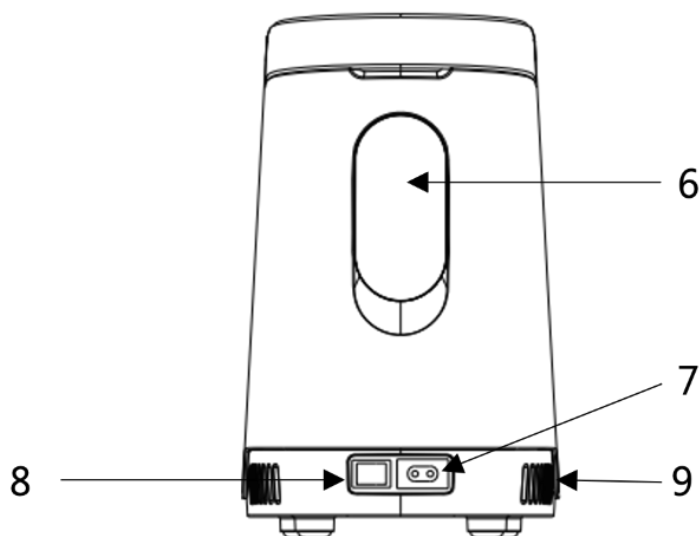


■ 主機背面過濾器蓋板(開啟狀態)

- 10. 過濾棉 (耗材)
- 11. 過濾毛氈 (耗材)
- 12. 過濾器蓋板
- 13. 外部進氣孔

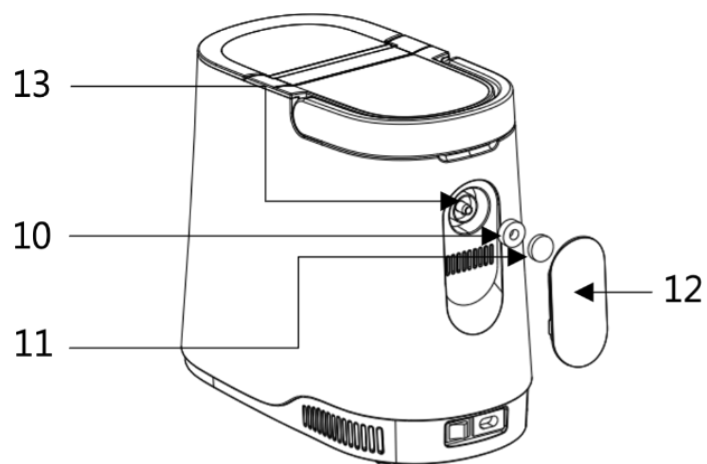


■ LED 觸控面板

- 14. 開關

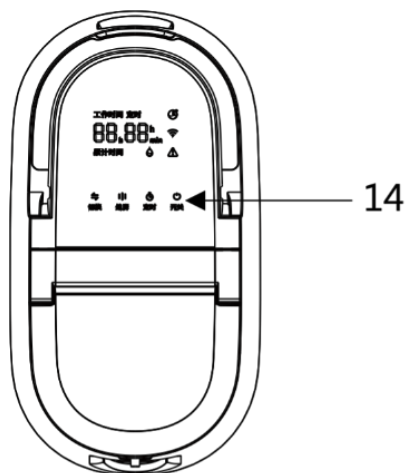


■ 正面前蓋打開

- 15. 前蓋
- 16. 轉接頭
- 17. 負離子生成器
- 18. 內部進氣孔

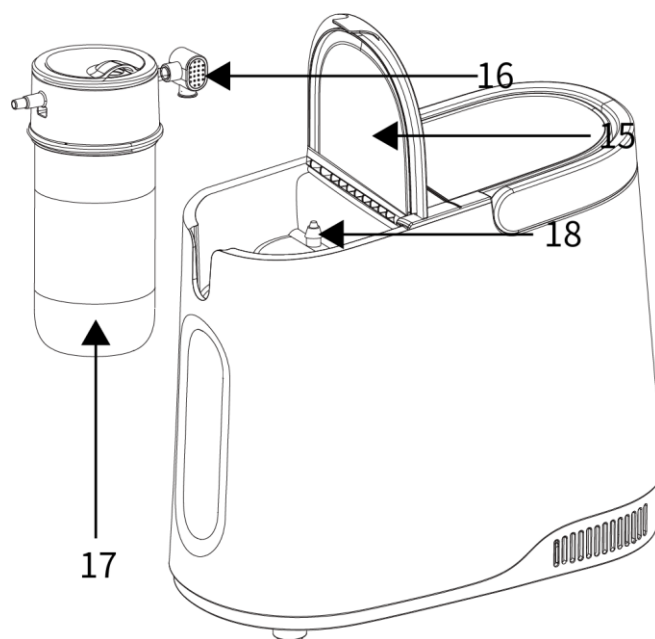

■ 負離子生成器

- 19. 轉接頭接口
- 20. 轉接頭
- 21. 負離子生成器上蓋
- 22. MAX 最高水位標線
- 23. MIN 最低水位標線
- 24. 負離子生成器瓶
- 25. 密封圈
- 26. 負離子出口處
- 27. 注水塞

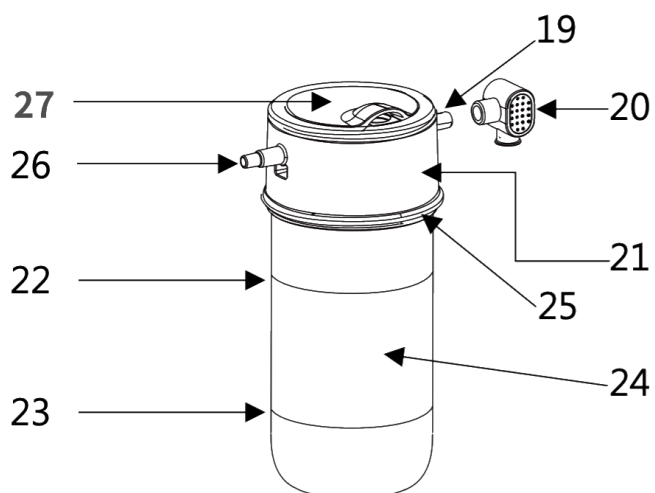

二、重要安全說明

使用前，請仔細閱讀並理解本手冊的說明及警告提示，閱讀後請妥善保管，以備未來查閱。

請勿使用非原廠零件、配件等裝置，若因此造成產品故障，不歸屬保固範圍。

機器不得連續運轉超過規定時間(6 小時)，需間隔 1 小時才能再次使用（詳見規格標示）。

請在拆除包裝後，先檢查產品是否損壞，並核對配件是否齊全。

請勿側放或倒置本產品。

產品必須加入純水（水溫接受範圍 10°C–40°C），禁止加入其他類型飲用水、油、洗滌液等液體。

請注意輕拿輕放，以免產品跌落造成砸傷。

兒童及無行為能力者，必須在監督下使用本產品。

產品應放置於室內陰涼乾燥處，避免陽光直射，勿靠近暖氣、電熱或其他高溫設備。

插入或卸除電源插頭時，應避免手上有水，以免觸電。

請勿自行拆卸產品零組件，若因此造成損壞，不歸屬保固範圍。

長時間不使用時，請斷開電源，並清空負離子生成器瓶內殘餘水份。

長時間停用後再次使用前，務必先清洗負離子生成器，清洗乾淨後才可啟動。

清潔時請使用柔軟溼棉布擦拭，切勿使用菜瓜布、鐵刷或科技海綿（三聚氰胺甲醛樹脂泡棉）。禁用強酸、強鹼、酒精及汽油，並嚴禁用水沖洗機身。

請勿將本產品放置在發熱設備或高溫表面上，切勿焚燒，否則可能導致爆炸。


本產品出現故障時，請立即切斷電源，並聯繫客服。

若未按照上述說明操作造成機器損毀，本公司將不承擔任何責任。

三、快速使用指南


步驟 1 開箱確認

取出主機和電源線，檢查箱內產品是否齊全、是否有破損。詳細產品內容請參閱「一、商品結構與配件」。

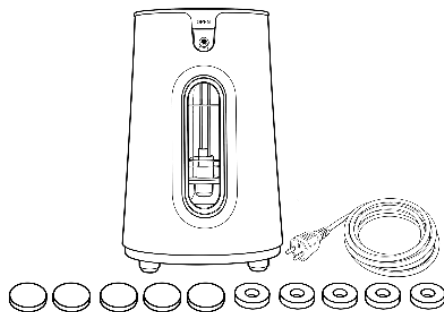


步驟 2 取出生成器

打開前蓋，取出負離子生成器。

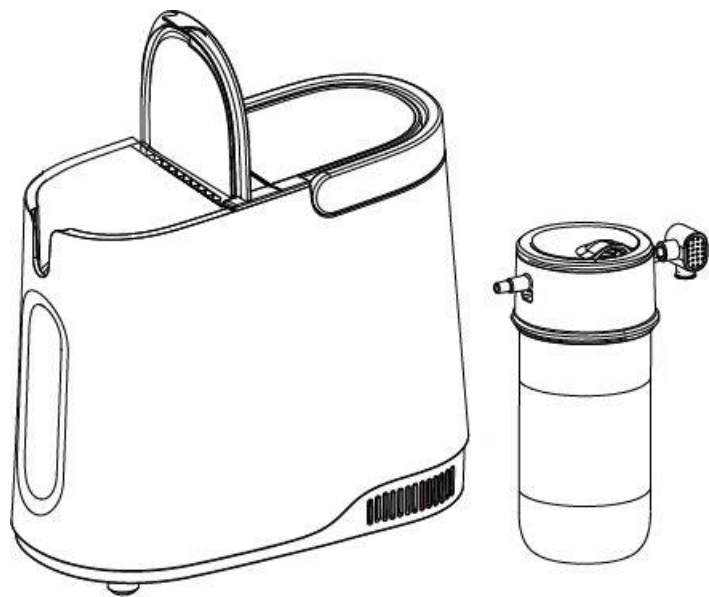


步驟 3 加水

轉開負離子生成器上蓋，將純水加入瓶內，每次使用前請確認將水量補充至 MAX 最高水位標線。

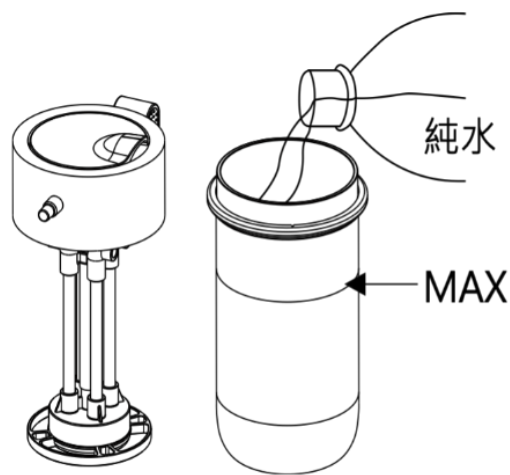

步驟 4 安裝啟動

旋緊上蓋，將轉接頭對準金屬進氣口套入，安裝回主機槽並蓋上前蓋。插穩電源後打開電源開關，按下 LED 觸控面板上的開機鍵即可啟動。

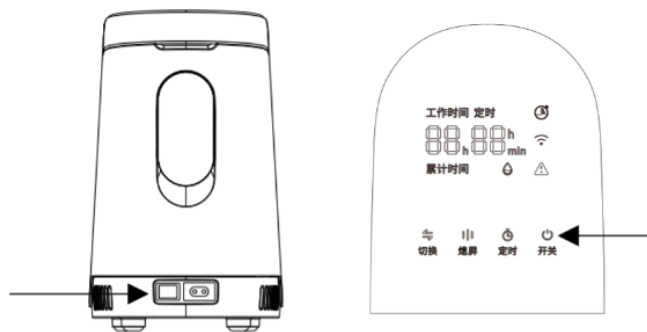

💧 換水步驟注意事項（負離子生成器）

每 1 至 2 天換水 1 次，每週清洗 1 次。

不使用時，請將瓶內水清空，保持清潔與乾燥。

缺水時 LED 面板缺水圖示會亮起，請暫停機器並加水至 MAX 標線。

LED 觸控面板功能

開關 / 待機：開啟電源鍵後，按下 LED 觸控面板上的開關鍵以啟動機器；再次按下即可停止運轉。

定時：在機器運行時，按定時鍵可選擇 1 / 2 / 4 / 8 / 12 小時定時，或取消定時。

熄燈：在機器運行時，按熄燈鍵可切換螢幕熄燈；再次喚醒只需隨意按鍵兩次。

切換：在機器運行時，按切換鍵可顯示累積計時模式；再次按下恢復上一次狀態。



五、常見故障排除

故障現象	故障分析	處理方法
打開電源開關，機器不工作或電源開關不亮	電源插頭與插座接觸不良	確認電源線插頭正確插穩。
	插座沒有電量輸出	移至有電量輸出的插座。
	主機板損壞	須送回代理商進行更換。
機器運轉正常，但氣體輸出量很小或沒有	負離子生成器不密封、漏氣或注水塞未壓緊	重新蓋緊或更換負離子生成器蓋，確認注水塞壓緊到位。
	負離子生成器與轉接頭接口未安裝到位	重新安裝，轉接頭需與轉接頭接口連接到位。
	進氣接口處(轉接頭)缺損或漏裝	更換或重裝進氣接口處(轉接頭)密封圈。
開機工作一段時間後，機器溫度過高或停機	外部進氣孔、散熱孔受阻	機器應放在通風處，距牆壁、傢俱等至少 10 公分以上。
	過濾棉、過濾毛氈髒污	檢查並清理或更換背面的過濾棉與過濾毛氈。
	機器溫度過高（過熱保護自動停機）	關閉機器，確認進氣口、散熱孔是否堵塞，過濾棉是否髒污；待溫度降低後重新開機。

■ 面板錯誤代碼（E 警訊）

錯誤碼	處理方法
E1	機器傾斜角度過大，請將機器扶正後重啟。
E2	1. 散熱孔 10 cm 內有堵塞物，請移開或移動機器，待冷卻 30 分鐘後重啟。 2. 機器置於柔軟表面導致散熱孔受阻，請移至平穩堅硬地面，冷卻 30 分鐘後重啟。 3. 以上操作後仍出現錯誤，請洽代理商。
E3	請洽詢代理商。

六、保固條款

■ 保固服務

本產品自購買之日起享受 1 年保固服務，但須符合保固條款規定。如有任何疑問，請於上班時間聯繫客服。

■ 保固範圍

購買日起 1 年內若發現材料、製造或功能缺陷，本公司將為您維修；如有停產零件，將提供等效替代零件。

於本店購買之商品，若日後需維修、清潔或其他售後服務，請先與本店客服聯繫確認流程後，再行寄送；無論是否仍在保固期內，寄送與退回之來回國際運費皆由購買者自行負擔。

■ 非保固範圍

因不小心、誤用、疏忽、暴力操作或未按使用手冊操作所造成的意外損壞與故障。

超出正常使用條件，強行使用造成的故障或損傷。

未按本公司指導說明進行組裝或安裝的零件。

使用非本公司原廠零件。

非本公司或本公司授權代理所執行的維修或改動。

不可預測的自然災害所造成的損害。

非保固範圍或超過保固時間，皆需自行負擔來回運費。

■ 保修範圍概要

保修條款自購買之日起生效。

保修前，需確認原購買紀錄。

所有維修程序均由本公司或本公司授權廠商完成。


任何更換的零件，均歸公司所有。

七、機器保養（耗材 / 負離子生成器）

設備務必定期清洗，以維持最佳使用效果與機器壽命。

A. 負離子生成器（建議每 3 個月深度清潔一次）

受空氣中懸浮灰塵顆粒影響，即使配有多層過濾系統，仍無法完全杜絕細小塵埃殘留。請用軟毛牙刷清理生成器下方氣孔。

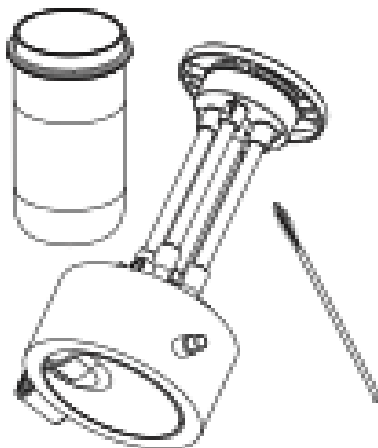

若設備長期使用卻未及時清潔維護，不僅導致灰塵持續堆積，更易滋生細菌微生物，可能出現風量下降、水位監測異常等故障，影響使用效果與壽命。

B. 過濾棉 / 過濾毛氈（建議每 3 個月更換一次）



若周遭環境空氣品質較差，可提前更換。

取下過濾棉、過濾毛氈前，請確保機器處於關機狀態。

取下舊的過濾棉、過濾毛氈後，換上新品並確認安裝到位。

八、基本參數


規格項目	數值
------	----

產品名稱	水擊式負離子產生器
產品型號	DE01
電源	AC110V
額定流量	≥17 L/Min
額定功率	110W±10%
適用水源	純水
使用環境溫度	10°C-40°C
使用環境溼度	30%-75%
產品尺寸	326 × 172 × 287 mm
淨重	5 kg

一、商品结构与配件


■ 正面

1. LED 触控面板
2. 前盖
3. 手提把
4. 负离子出口处
5. 水位透视窗

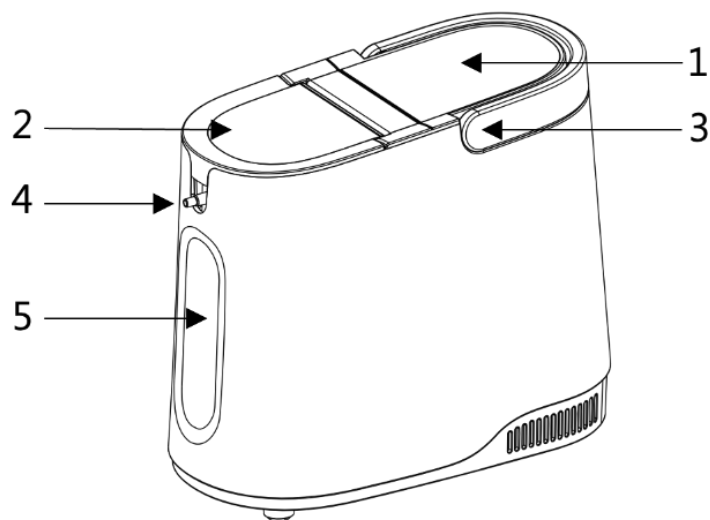


■ 背面

6. 过滤器盖板
7. 电源接头
8. 电源开关
9. 散热孔

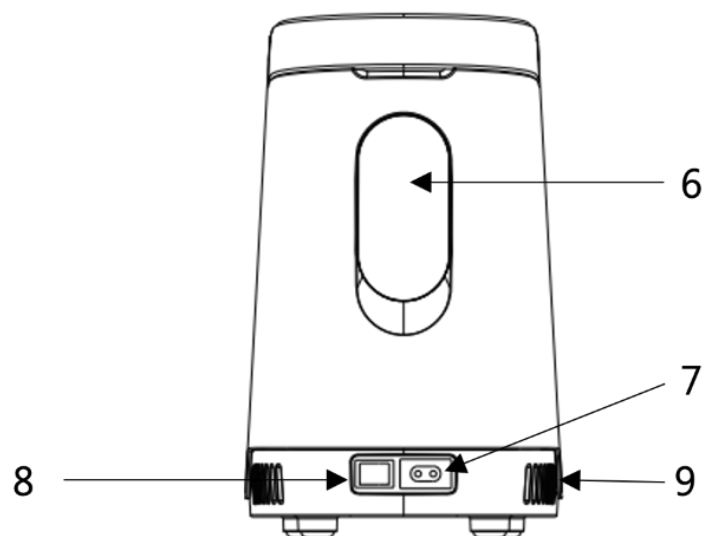


■ 主机背面过滤器盖板(開啟狀態)

- 10. 过滤棉 (耗材)
- 11. 过滤毛毡 (耗材)
- 12. 过滤器盖板
- 13. 外部进气孔

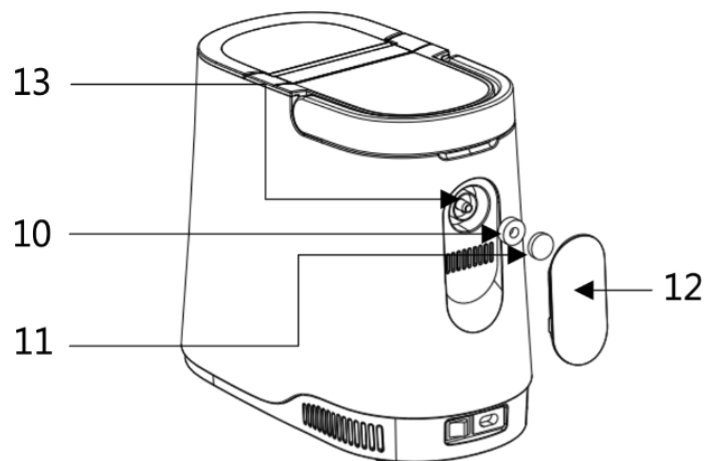


■ LED 触控面板

- 14. 开关

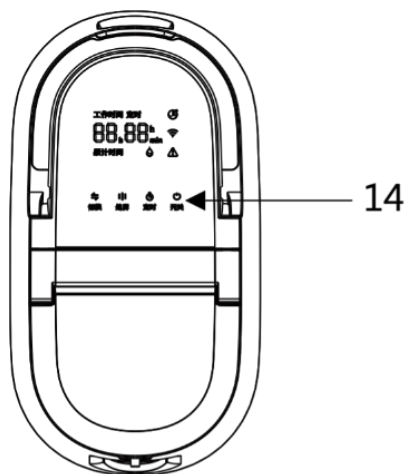


■ 正面前盖打开

- 15. 前盖
- 16. 转接头
- 17. 负离子生成器
- 18. 内部进气孔

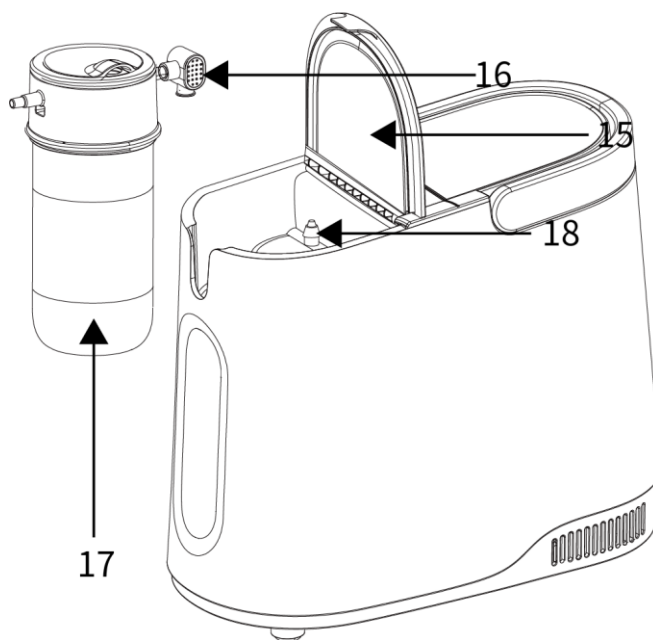

■ 负离子生成器

- 19. 转接头接口
- 20. 转接头
- 21. 负离子生成器上盖
- 22. MAX 最高水位标线
- 23. MIN 最低水位标线
- 24. 负离子生成器瓶
- 25. 密封圈
- 26. 负离子出口处
- 27. 注水塞

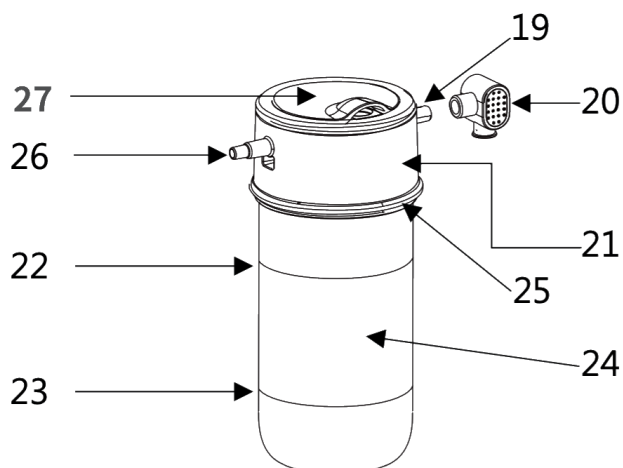

二、重要安全说明

使用前，请仔细阅读并理解本手册的说明及警告提示，阅读后请妥善保管，以备未来查阅。

请勿使用非原厂零件、配件等装置，若因此造成产品故障，不归属保固范围。

机器不得连续运转超过规定时间(6 小时)，需间隔 1 小时才能再次使用（详见规格标示）。

请在拆除包装后，先检查产品是否损坏，并核对配件是否齐全。

请勿侧放或倒置本产品。

产品必须加入纯水（水温接受范围 10℃-40℃），禁止加入其他类型饮用水、油、洗涤液等液体。

请注意轻拿轻放，以免产品跌落造成砸伤。

儿童及无行为能力者，必须在监督下使用本产品。

产品应放置于室内阴凉干燥处，避免阳光直射，勿靠近暖气、电热或其他高温设备。

插入或卸除电源插头时，应避免手上有水，以免触电。

请勿自行拆卸产品零组件，若因此造成损坏，不归属保固范围。

长时间不使用时，请断开电源，并清空负离子生成器瓶内残余水份。

长时间停用后再次使用前，务必先清洗负离子生成器，清洗干净后才可启动。

清洁时请使用柔软湿棉布擦拭，切勿使用菜瓜布、铁刷或科技海绵（三聚氰胺甲醛树脂泡棉）。禁用强酸、强碱、酒精及汽油，并严禁用水冲洗机身。

请勿将本产品放置在发热设备或高温表面上，切勿焚烧，否则可能导致爆炸。


本产品出现故障时，请立即切断电源，并联系客服。

若未按照上述说明操作造成机器损毁，本公司将不承担任何责任。

三、快速使用指南


步骤 1 开箱确认

取出主机和电源线，检查箱内产品是否齐全、是否有破损。详细产品内容请参阅「一、商品结构与配件」。

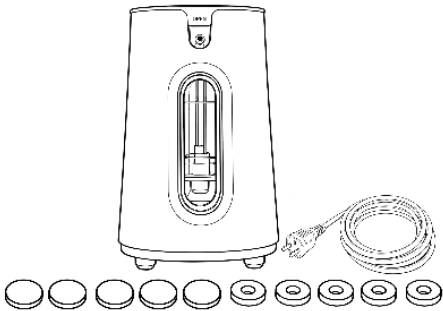


步骤 2 取出生成器

打开前盖，取出负离子生成器。

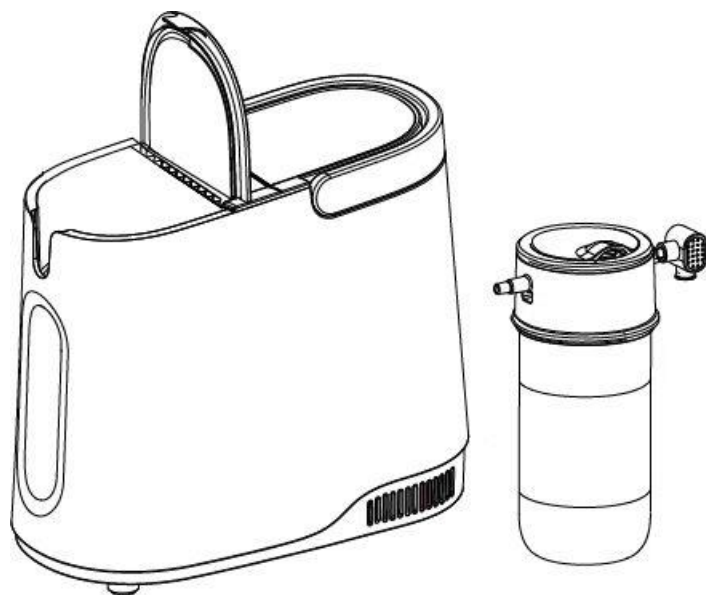


步骤 3 加水

转开负离子生成器上盖，将纯水加入瓶内，每次使用前请确认将水量补充至 MAX 最高水位标线。

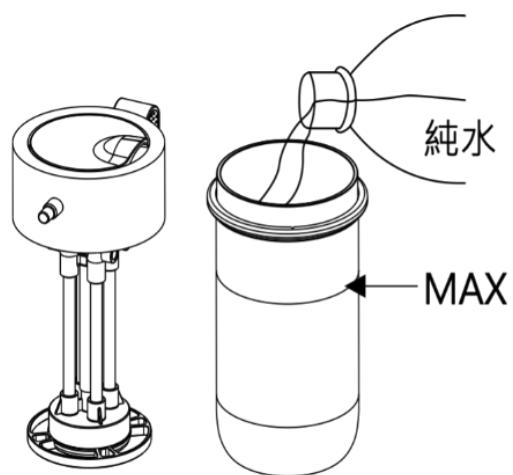

步骤 4 安装启动

旋紧上盖，将转接头对准金属进气口套入，安装回主机槽并盖上前盖。插稳电源后打开电源开关，按下 LED 触控面板上的开机键即可启动。

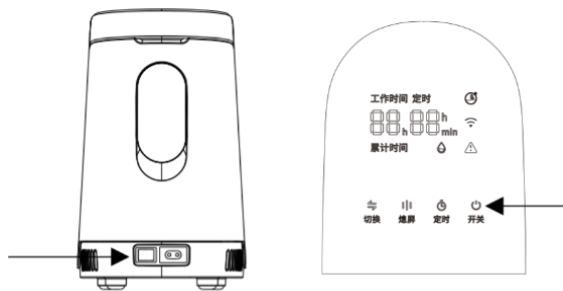

换水步骤注意事项（负离子生成器）

每 1 至 2 天换水 1 次，每周清洗 1 次。

不使用时，请将瓶内水清空，保持清洁与干燥。

缺水时 LED 面板缺水图示会亮起，请暂停机器并加水至 MAX 标线。

LED 触控面板功能

开关 / 待机：开启电源键后，按下 LED 触控面板上的开关键以启动机器；再次按下即可停止运转。

定时：在机器运行时，按定时键可选择 1 / 2 / 4 / 8 / 12 小时定时，或取消定时。

熄灯：在机器运行时，按熄灯键可切换屏幕熄灯；再次唤醒只需随意按键两次。

切换：在机器运行时，按切换键可显示累积计时模式；再次按下恢复上一次状态。



五、常见故障排除

故障现象	故障分析	处理方法
打开电源开关，机器不工作或电源开关不亮	电源插头与插座接触不良	确认电源线插头正确插稳。
	插座没有电量输出	移至有电量输出的插座。
	主机板损坏	须送回代理商进行更换。
机器运转正常，但气体输出量很小或没有	负离子生成器不密封、漏气或注水塞未压紧	重新盖紧或更换负离子生成器盖，确认注水塞压紧到位。
	负离子生成器与转接头接口未安装到位	重新安装，转接头需与转接头接口连接到位。

	进气接口处(轉接頭)缺损或漏装	更换或重装进气接口处(轉接頭)密封圈。
开机工作一段时间后，机器温度过高或停机	进气孔、散热孔受阻	机器应放在通风处，距墙壁、家具等至少 10 厘米以上。
	过滤棉、过滤毛毡脏污	检查并清理或更换背面的过滤棉与过滤毛毡。
	机器温度过高（过热保护自动停机）	关闭机器，确认进气口、散热孔是否堵塞，过滤棉是否脏污；待温度降低后重新开机。

■ 面板错误代码（E 警讯）

错误码	处理方法
E1	机器倾斜角度过大，请将机器扶正后重启。
E2	1. 散热孔 10 cm 内有堵塞物，请移开或移动机器，待冷却 30 分钟后重启。 2. 机器置于柔软表面导致散热孔受阻，请移至平稳坚硬地面，冷却 30 分钟后重启。 3. 以上操作后仍出现错误，请洽代理商。
E3	请洽询代理商。

六、保固条款

■ 保固服务

本产品自购买之日起享受 1 年保固服务，但须符合保固条款规定。如有任何疑问，请于上班时间联系客服。

■ 保固范围

购买日起 1 年内若发现材料、制造或功能缺陷，本公司将为您维修；如有停产零件，将提供等效替代零件。

于本店购买之商品，若日后需维修、清洁或其他售后服务，请先与本店客服联系确认流程后，再行寄送；无论是否仍在保固期内，寄送与退回之来回国际运费皆由购买者自行承担。

■ 非保固范围

因不小心、误用、疏忽、暴力操作或未按使用手册操作所造成的意外损坏与故障。

超出正常使用条件，强行使用造成的故障或损伤。

未按本公司指导说明进行组装或安装的零件。

使用非本公司原厂零件。

非本公司或本公司授权代理所执行的维修或改动。

不可预测的自然灾害所造成的损害。

非保固范围或超过保固时间，皆需自行承担来回运费。

■ 保修范围概要

保修条款自购买之日起生效。

保修前，需确认原购买记录。


所有维修程序均由本公司或本公司授权厂商完成。
任何更换的零件，均归公司所有。

七、机器保养（耗材 / 负离子生成器）

设备务必定期清洗，以维持最佳使用效果与机器寿命。

A. 负离子生成器（建议每 3 个月深度清洁一次）

受空气中悬浮灰尘颗粒影响，即使配有多层过滤系统，仍无法完全杜绝细小尘埃残留。请用软毛牙刷清理生成器下方气孔。

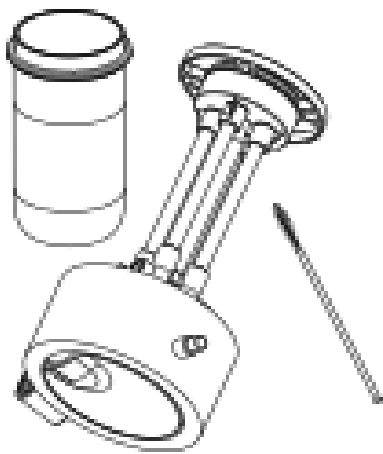

若设备长期使用却未及时清洁维护，不仅导致灰尘持续堆积，更易滋生细菌微生物，可能出现风量下降、水位监测异常等故障，影响使用效果与寿命。

B. 过滤棉 / 过滤毛毡（建议每 3 个月更换一次）



若周遭环境空气品质较差，可提前更换。

取下过滤棉、过滤毛毡前，请确保机器处于关机状态。

取下旧的过滤棉、过滤毛毡后，换上新品并确认安装到位。

八、基本参数


规格项目	数值
产品名称	水击式负离子产生器
产品型号	DE01
电源	AC110V
额定流量	≥17 L/Min
额定功率	110W±10%
适用水源	纯水
使用环境温度	10°C-40°C
使用环境湿度	30%-75%
产品尺寸	326 × 172 × 287 mm
净重	5 kg

Please read this manual carefully before use and retain for future reference.

1. Product Structure and Accessories


Front View

1. LED Touch Panel
2. Front lid
3. Carrying Handle
4. Air Outlet
5. Waterline see-through Window

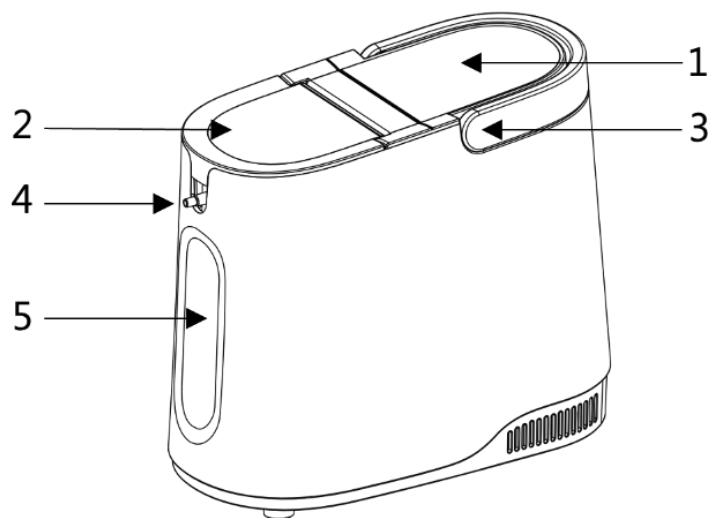


Back View

6. Filter Cover
7. Power Connector
8. Power Switch
9. Ventilation Holes

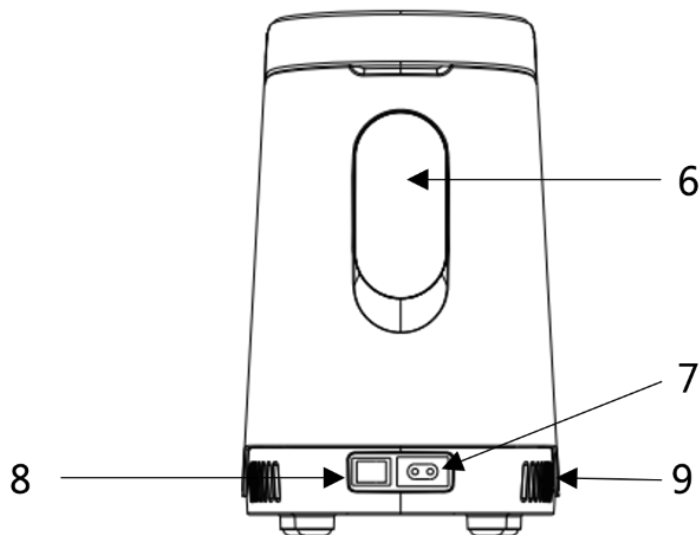


Back View with Filter Cover Opened

- 10. Filter Cotton (Consumable)
- 11. Filter Felt (Consumable)
- 12. Filter Cover
- 13. Outer Air Inlet

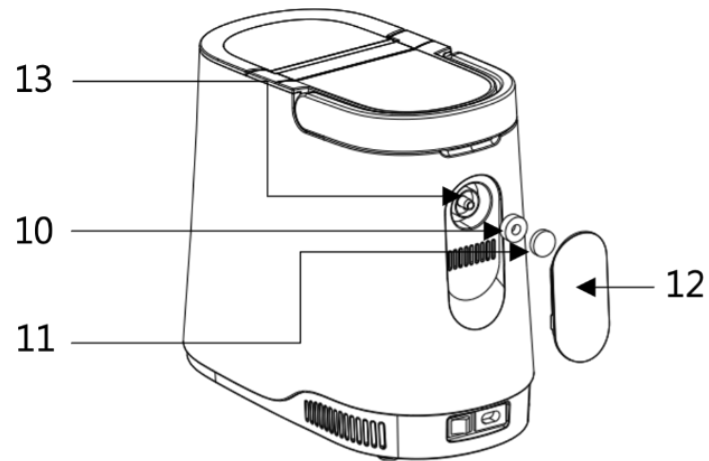


LED Touch Panel

- 14. Power button

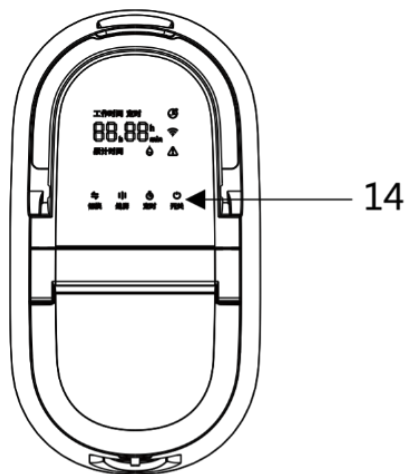


Front Lid Opened

- 15. Front Lid
- 16. Adapter
- 17. Main HydroFlow system
- 18. Inner Air Inlet

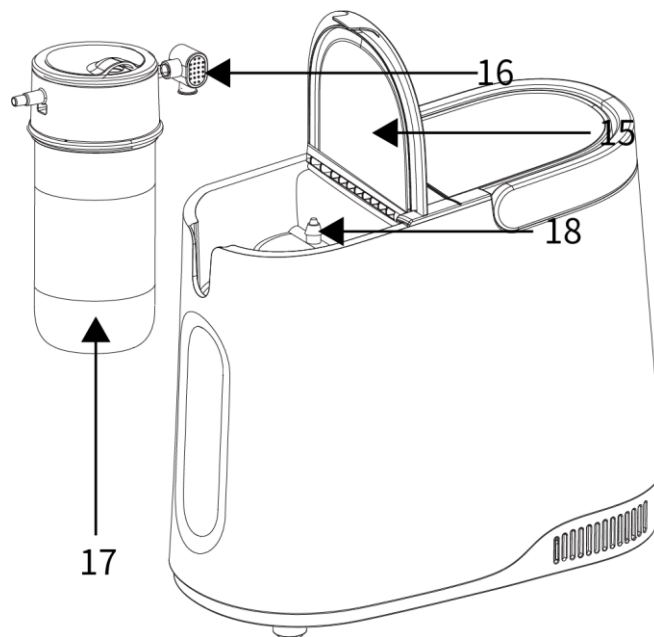

Main HydroFlow System

- 19. Adapter Port
- 20. Adapter
- 21. Main HydroFlow System Cap
- 22. MAX Water Level Line
- 23. MIN Water Level Line
- 24. Main HydroFlow System Bottle
- 25. Ring
- 26. Air Outlet
- 27. Filler Cap

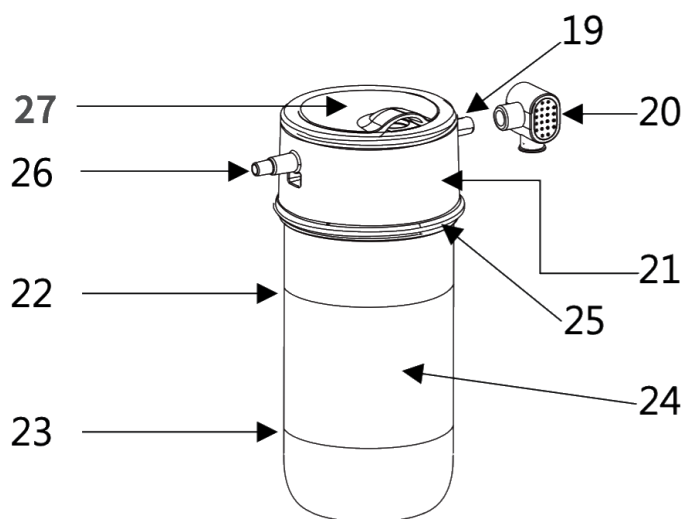

2. Safety Instructions

Please read and understand all instructions and warnings before use. Keep this manual for future reference.

Do not use non-genuine parts or accessories. Damage caused by non-genuine parts is not covered by the warranty.

Do not operate continuously for more than 6 hours. Allow at least 1 hour resting before restart.

After open the packing box, check all parts are included and without any damage.

Do not place the product on its side or upside down.

Only use purified water (10°C–40°C). Do not add other liquids such as tap water, oil, or detergent while in use.

Handle with care to avoid dropping, which may cause injury to the user and damage the machine.

Children and persons with disabilities can only use this product under supervision.

Place the machine indoors in a cool, dry location, and away from direct sunlight, heating or high-temperature devices.

Ensure your hands are dry when inserting or removing the power plug to avoid electric shock.

Do not disassemble the product except the Main HydroFlow system for cleaning purpose as directed. Any malfunction due to unauthorized disassembly is not covered by the warranty.

Disconnect power and pour out the remaining water from the Main HydroFlow bottle when the machine will not be used in the following days.

Thoroughly clean the Main HydroFlow bottle before using after long term storage.

Clean the machine with a soft, damp cotton fabric only. Do not use abrasive pads, wire brushes, or melamine sponges. Avoid strong acids, alkalis, alcohol, or gasoline. Never rinse the machine with water except the Main HydroFlow system when cleaning.

Do not place the machine on heat-generating devices or hot surfaces. Do not incinerate the machine to avoid any risk of explosion.


In case of malfunction, immediately disconnect power and contact customer service.

Failure to follow safety instructions excludes any responsibility on the parts of distributors and manufacturers.

3. Quick Start Guide


Step 1 — Unpacking and Checking

Remove the main unit and power cord. Check all accessories are present and not damaged. Refer to Section 1 for full list of product contents.

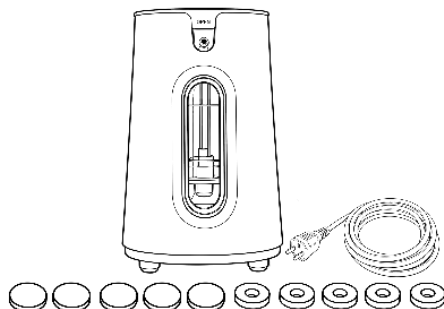


Step 2 — Remove the Main HydroFlow System

Open the front lid and take out the main HydroFlow System.

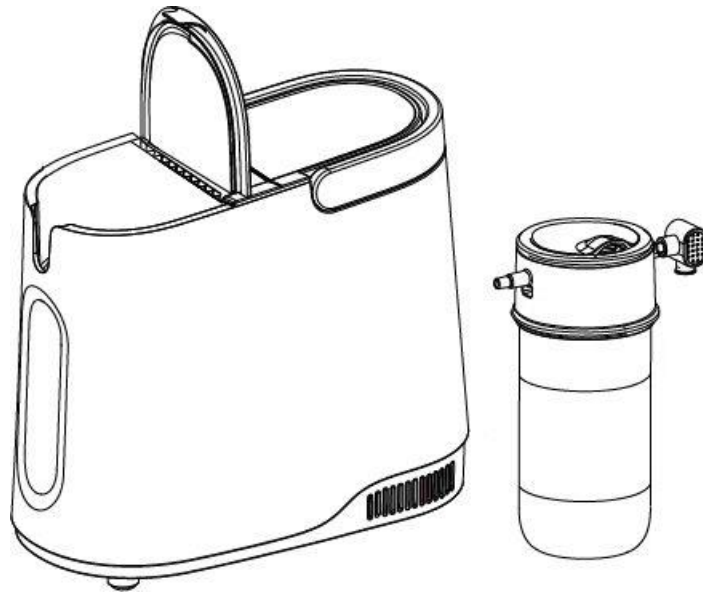


Step 3 — Adding Water

Twist open the HydroFlow system cap and fill the HydroFlow system bottle with purified water. Make sure to fill up to the MAX line before each use.

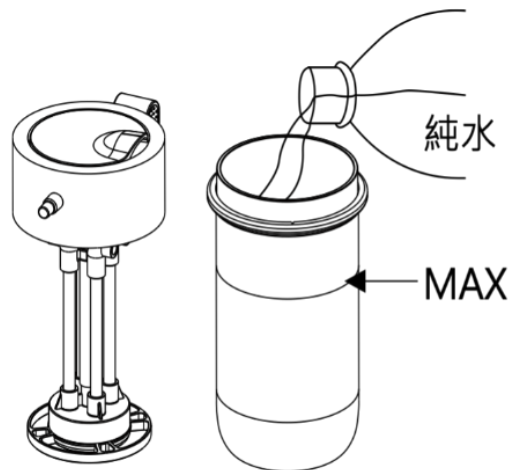

Step 4 — Install and Start

Twist and tighten the Main HydroFlow system cap, align the adapter with the adaptor port before connecting, place back into the main unit, and close the front lid. Plug the power cord in to power connector, turn on the power switch, and press the power button on the LED panel to start.

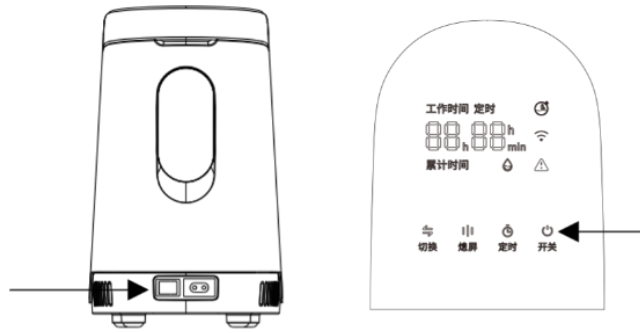

Water Change Notes (Main HydroFlow System)

Change water every 1–2 days; clean the Main HydroFlow system once a week.

Empty the Main HydroFlow system bottle and keep it clean and dry when not in use.

When waterline is low, the LED indicator will light up. Pause the machine and refill with purified water to the MAX line.

Instruction for LED Touch Panel

Power / Standby : After turning on the power switch, press the power button to start; press again to stop.

Timer : While running, press the timer button to select 1 / 2 / 4 / 8 / 12 hour timer, or cancel.

Screen Off : While running, press to turn off the display. Press any button twice to awaken screen.

Switch Mode : While running, press to display cumulative runtime. Press again to return to previous state.



5. Troubleshooting

Symptom	Possible Cause	Solution
The machine does not work or the power switch light is not on when turn on the powder switch	Poor connection between the plug and outlet	Ensure the power plug is firmly inserted to the outlet.
	No electricity from the outlet	Move to a working outlet.
	Mainboard is damaged	Contact the distributor.
Machine runs but airflow is very low or absent	Main HydroFlow system is not well-sealed, air leaking, or filler cap is not pressed tight enough	Re-tighten or replace the Main HydroFlow system cap; confirm the filler cap is fully pressed.
	Main HydroFlow system not properly connected to the inner air inlet	Reinstall — adapter must be fully inserted into the inner air inlet.
	Adaptor damaged or not installed	Replace or reinstall the Adaptor.

Machine overheats or shuts down after running for a while	Blockage of Outer Air inlet or ventilation holes	Place machine in a well-ventilated area at least 10 cm away from walls and furniture.
	Dirty filter cotton or filter felt	Check, clean, or replace the filter cotton and felt on the back part.
	Overheating of the machine (Auto protection will be triggered to turn off the machine)	Turn off the machine; check for blockages and dirty filter; restart after cooling.

■ Error Codes (E Alerts)

Error Code	Solution
E1	The machine is tilted at huge angle. Straighten the machine and restart.
E2	1. Blockage within 10 cm of ventilation holes — remove obstruction and restart after 30 min of cooling. 2. Placing the machine on soft surface and blocking ventilation holes — move to flat and hard surface and restart after 30 min. 3. If error persists, contact your distributor.
E3	Please contact your distributor.

6. Warranty Terms

■ Warranty Service

This product is covered by a 1-year warranty from the date of purchase, subject to the warranty terms below. Contact customer service during business hours for any questions.

■ Warranty Coverage

Defects in materials, manufacturing, or function within 1 year of purchase will be repaired. Discontinued parts will be replaced with functional equivalent alternatives.

Products requiring repair, cleaning, or after-sales service must inform customer service before shipping. International shipping costs (both ways) are the buyer's responsibility regardless of warranty status.

■ Non-Warranty Cases

Damage or malfunction from carelessness, misuse, negligence, force, or failure to follow the manual.

Damage from operation beyond normal usage conditions.

Parts assembled without following the manufacturer's instructions.

Use of non-genuine parts.

Repairs or modifications not performed by the manufacturer or its authorized distributors.

Damage caused by unforeseeable natural disasters.

Customer is responsible for all shipping costs in the cases of beyond warranty coverage or the warranty has expired.

■ Warranty Summary

Warranty terms take effect from the date of purchase.

Original purchase records must be confirmed before warranty service.


All repairs are performed by the manufacture or its authorized service providers.

Any replaced parts become the property of the manufacture or distributors.

7. Maintenance (Consumables / Main HydroFlow System)

A. Main HydroFlow System (Recommended: Deep Clean Every 3 Months)

- Regular cleaning and well-dried after each usage are essential to maintain optimal performance and extend the lifespan of the device.
- Use soft toothbrush to clean the air holes at the bottom of the HydroFlow System.
- Follow the cleaning clip provided to disassemble parts of HydroFlow System. Clean parts with water by using cotton material. After cleaning, fill the bottle with purified water and twist closed before shaking. Pour out water after shaking.
- If neutral detergent or 2% bleach is used to clean the HydroFlow System, you will need to use purified water to rinse the bottle afterwards.
- Make sure there is no tap water, detergent, or bleach residue before the next use. Or remember to rinse with purified water after each cleaning.
- QRcode

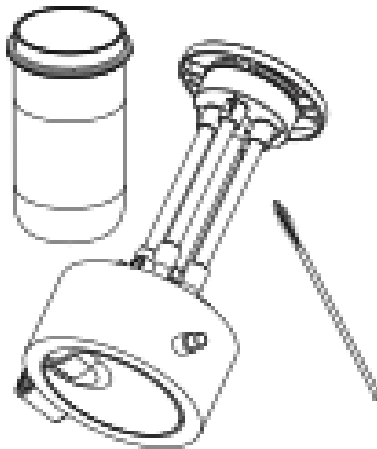

B. Filter Cotton / Filter Felt (Recommended: Replace Every 3 Months)



Replace sooner if the surrounding air quality is poor.

Ensure the machine is powered off before removing filter materials.
After removing old filter materials, install new ones and confirm they are properly seated.

8. Technical Specifications

Specification	Value
Product Name	HydroFlow Air System
Model Number	DE01
Power Supply	AC110V
Rated Flow	≥17 L/Min
Rated Power	110W±10%
Water Type	Purified Water
Operating Temperature	10°C–40°C
Operating Humidity	30%–75%
Dimensions	326 × 172 × 287 mm
Net Weight	5 kg

原產地 / Country of Origin : 中國 / China

委託製造商 / Contract Manufacturer : DCNHC, LCC
地址 / Address : 1112 110TH AVE NE UNIT 107 BELLEVUE 98004-3758 WA (USA)

製造商 / Manufacturer : 江蘇雙盛醫療機械有限公司 / Jiangsu Shuangsheng Medical Device Co., Ltd.
地址 / Address : 丹陽市丹東工業園 (陵口 122 省道工業集中區 12 號) / Dandong Industrial Park, Danyang City (No.12, Industrial Center area, Provincial Highway 122, Lingkou)

